



Drywall Sample Removal Instructions

1. Choose a suitable location to remove a drywall sample. Stay away from locations that may have electrical wires, phone or data cables, or plumbing behind the wall. Remember to check both sides of the wall.



2. Locate the studs using a stud finder. Mark the location of the studs with a pencil or marker.




3. Mark a 3" x 3" section for removal in between studs. Cut out using a keyhole saw or other cutting device. Remember to use the proper safety equipment while doing so.





4. Label the sample with a marker. Note the address and location in the home or building. Enclose sample in sealed plastic bag.

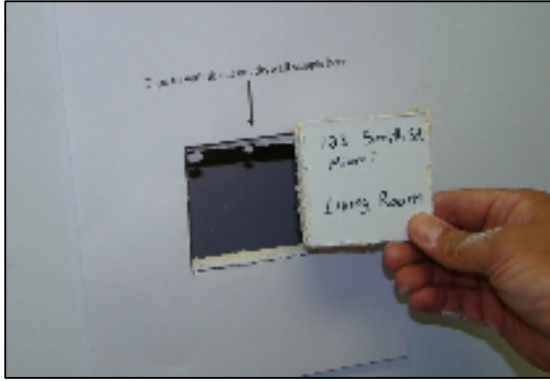

5. Send sample(s) to:

Matco Services, Inc.
Attn: Drywall Testing Dept.
4131 SW 47th Avenue, Suite 1407
Davie, FL 33314